



Canon Powershot SX30 IS Back Camera Housing Replacement

A replacement of the back camera casing that displays the functions buttons.

Written By: Ellis DeVoe



INTRODUCTION

Plastic cover over the back side of the camera.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Back Camera Housing



- Position the camera so that you face the left side
 - Unscrew the two 6 mm screws shown using a screwdriver

Step 2

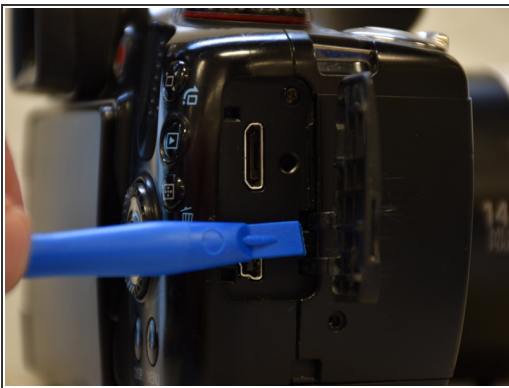

- Remove the plastic flap by pressing down on the center of the hinge and pulling on the flap with the spudger
 - Then, unscrew the lone 6mm screw that was under the plastic flap (shown red)

Step 3



- Turn the camera so that you face the bottom side of the camera
 - Unscrew the three 4 mm screws shown red using a screwdriver
 - Unscrew the lone 6 mm screw shown orange
 - Do not touch the screw shown yellow, it can remain in

Step 4



- Turn the camera so you face the back side
 - Unscrew the two 6 mm screws shown

Step 5



- Gently remove the back cover using the prybar
- ⚠ Make sure not to break the wire inside. It is sensitive

Step 6




- Detach the wire by lifting the small black bar that holds it to the main body of the camera

Step 7



- Attach the new cover

Step 8

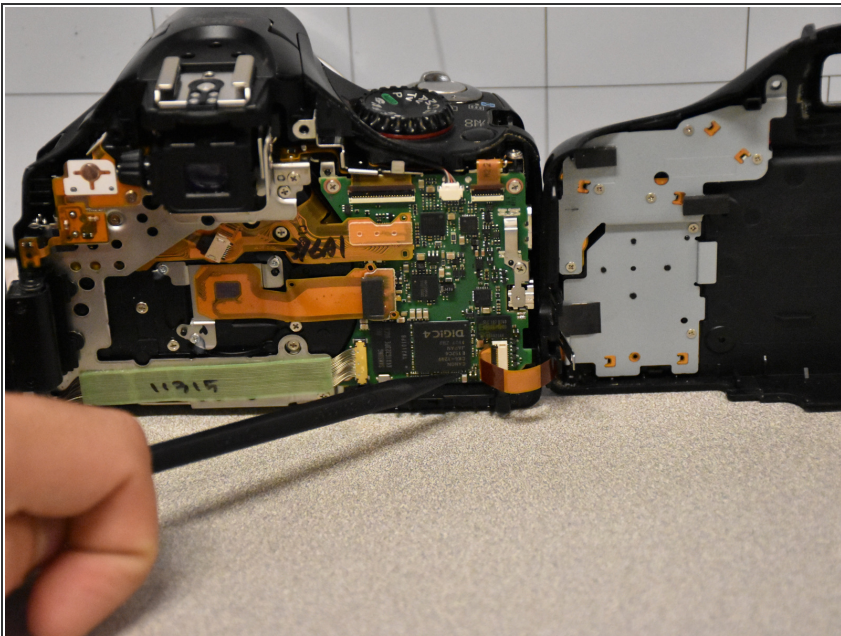

- Reattach the wire

Step 9



- Close the back cover

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-14 06:51:54 AM.